




# TS5430W

2.0 Channel Speaker System  
**Quick Start Guide**

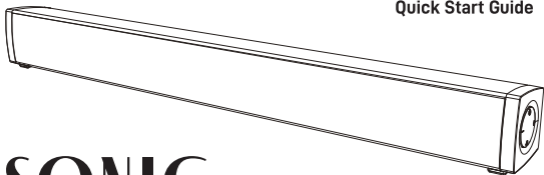

# SONIC

Please read this guide carefully before operating the product. Keep it handy for further reference

## Thank you for buying this TELE System product.



This Quick Start Guide contains the most important information for setting up and using this soundbar to get the best sound experience.

### ACCESSORIES




- 1 Soundbar    2 Remote Control    3 Quick Start Guide    4 PSU + 12V DC cigar adapter  
5 AUX audio cable    6 3,5mm audio cable    7 HDMI Cable

### DIAGRAM (BUTTONS, PORTS & INDICATOR)

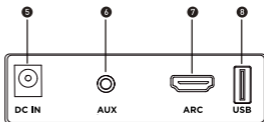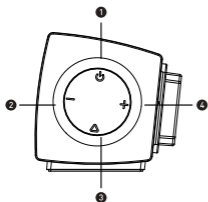

- 1 Short press to turn on, long press to turn off; short press to switch modes when it is turned on.  
2 Short press volume-1, long press to decrease quickly.  
3 In Bluetooth and USB mode, short press to play or pause.  
4 Short press volume +1, long press to increase quickly.  
5 DC 12 V IN jack to connect the power supply or cigarette lighter cable.  
6 AUX IN: Connect to the compatible devices via the 3,5mm audio cable or AUX audio cable (provided).  
7 ARC: Connect to the compatible devices via a HDMI cable.  
8 USB IN: Connect to the flash drive for playing MP3 / WAV / WMA / APE / FLAC files (64GB max).


## MODE

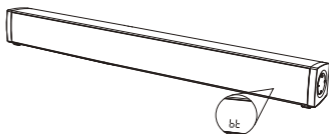

RF	HDMI ARC mode	bt	Bluetooth mode
USB	USB media player mode	AUX	Auxiliary input mode

## PLACEMENT



### A. Table Placement


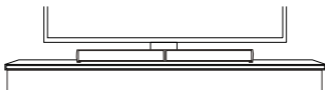


#### Placement:

Place the soundbar on a solid surface.

### B. Wall Mounted

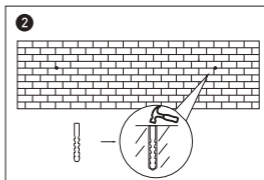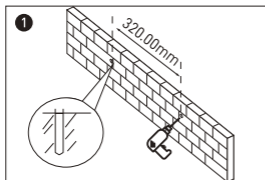

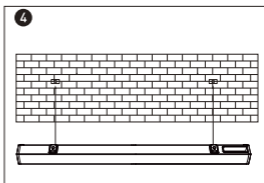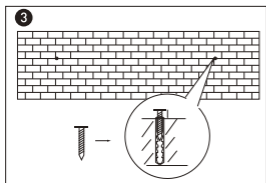

## REMOTE CONTROL

### A. Battery installation

(2 x AAA batteries not included)

**1**




**2**



**3**




### B. Use remote control

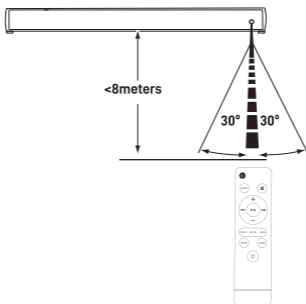

The working range of the remote control is  $\pm 30^\circ$  in both vertical and horizontal directions.

### C. How to use the remote control

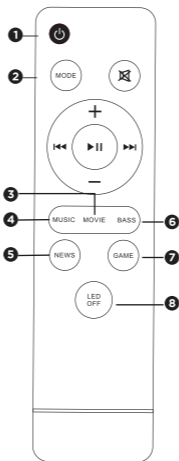


- 1 [STANDBY]** Short press for 1s to power on. Hold and press for 3s to power off.
- 2 [MODE]** Short press the button to switch input modes among Bluetooth, ARC (HDMI), USB and AUX.
- 3 [MOVIE]** EQ set for movies.
- 4 [MUSIC]** EQ set for music.
- 5 [NEWS]** EQ set for talk shows, interviews, news, etc. to hear dialogues clearly .
- 6 [BASS]** EQ for movies and music with enhanced bass.
- 7 [GAME]** EQ set for playing and watching games.
- 8 [LED OFF]** Press to turn on/off the LED indicator.


Remark: For more user-friendliness (especially at night) the LED will automatically be off if the mode will not be changed for some seconds. To re-trigger press MODE again.

## USING YOUR SOUNDBAR

### A. Power Connection

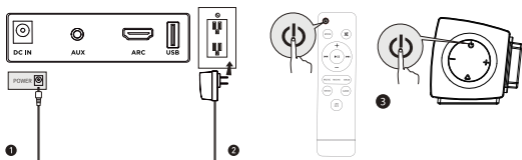

### B. Connect to TV

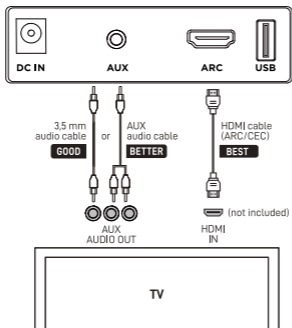

After connecting the line, use the buttons on the remote control or on the soundbar to change the input mode.

#### Note:


For best sound experience use the HDMI cable (high speed) to connect the soundbar and the TV. Alternatively use the AUX audio cable or the 3.5mm audio cable.

After connecting the soundbar and the TV use the buttons on your remote control or the soundbar.


If your TV supports the CEC function you should use this function to automatically switch on your soundbar and to control the Audio volume with the remote control of your TV.

32 is the maximum volume of the soundbar.

### C. Connect to Other Devices

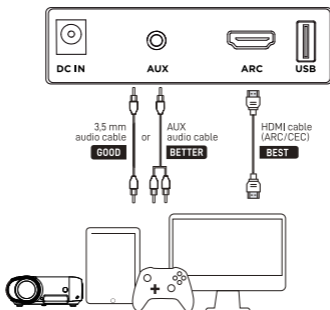

### D. Connect to Bluetooth Device

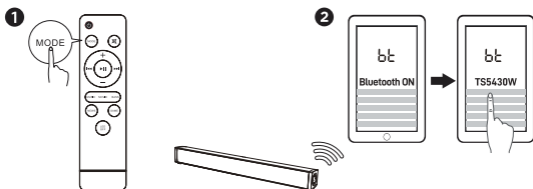

Short press the "MODE" button on the remote control to enter Bluetooth mode. When entering the pairing mode, the LED light (bt) starts to blink, Pairing name: TS5430W; once pairing is successfully completed, the voice prompt "Connected"

## SPECIFICATION

Soundbar Model	TS5430W
Power Supply	DC 12V/2,5A
Peak Power	30W
Sound Channel	2.0
Driver	45 x 80 mm – 2 Drivers
I/O port	HDMI(ARC)×1,USB×1, AUX×1
BT Version	5.0
Distortion	<0,5%
Product Weight	1.1 kg
Product Dimension	540 x 62 x 58 mm (LxDxH)

Power supply unit identifier	J301-1202500EX
Manufacturer	Shenzhen Junchen Technology Co.,Ltd
Manufacturer address	4th floor,building 2,a-2 workshop,Tongfuyu industrial park, Buchong community,Shajing street,Bao'an District,Shenzhen
Input voltage	100-240 Vac
Input AC frequency	50/60 Hz
Output voltage	12 Volt
Output current	2,5 A
Output power	30 Watt
Average active efficiency	87.54
Efficiency at low load (10 %)	85.37
No-load power consumption	0.08 Watt

## SIMPLIFIED EU CONFORMITY DECLARATION

The manufacturer, TELE System Digital s.r.l., states that equipment type of SOUNDBAR named TS5430W complies with the 2014/53/EU directive. The full text of the EU compliance declaration is available at the following Internet address: <https://www.telesystem.it/CE>

## SAFETY INSTRUCTIONS

For best sound experience use the HDMI cable (high speed) to connect the soundbar and the TV. Alternatively use the AUX audio cable or the 3,5mm audio cable.

After connecting the soundbar and the TV use the buttons on your remote control or the soundbar.

If your TV supports the CEC function you should use this function to automatically switch on your soundbar and to control the Audio volume with the remote control of your TV. 32 is the maximum volume of the soundbar.

**Based on legislative decree no. 49 dated 14th March, 2014  
"Execution of Directive 2012/19/EU about electrical and  
electronic equipment waste (RAEE)"**



This marking indicates that this product should not be disposed with other household wastes, but it should be disposed separately from other wastes. Therefore, the user should bring the product with all essential components to recycling centers for electrical and electronic wastes, or return to retailer before to buy a new product as equivalent type, in the ratio of 1 to 1, or 1 to 0 for products that have larger side lesser of 25cm. Correct disposal of your old appliance will help to prevent potential damage to the environment and to human health and support materials recycling. The unlawful disposal of the product should involve for user' administrative sanctions based on Legislative Decree no. 49 dated 14th March, 2014.

### **Correct disposal of the batteries in this product**

(Applicable in countries with separate collection systems)



This marking on battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## CAUTION:



To prevent possible hearing damage, do not listen to this product at high volume levels for long periods.

## Environmental Considerations

Operating Temperature: 5°C-35°C (41°C-95°F) Operating Humidity: 20%-75%, non-condensing.  
Storage Temperature: -15°C-45°C (5°C-113°F) Storage Humidity: 10%-90%, non-condensing.